


Function/Notes

+5v Supply	M-16	Max supply: 1A
+5v GND	M-26	
Air Temp Signal	M-28	
Coolant Temp Signal	M-29	
MAP Signal	M-12	
TPS Signal	M-30	
Trigger Signal (Crank)	M-32	VR or Hall
Sync Signal (Cam)	M-33	VR or Hall
Analog Input #5	M-08	0-5v Input or thermistor
Analog Input #6	M-23	0-5v Input
Analog Input #7	M-31	0-5v Input or thermistor
Analog Input #8	M-15	0-22v Input
Digital Input #1	M-14	Frequency or active when pulled high
Digital Input #2	M-13	Frequency or active when pulled high
Digital Input #6	M-27	Active when pulled to GND
Tachometer Output	M-17	
Digital Output #1	M-11	PWM able
Digital Output #2	M-02	PWM able
Digital Output #3	M-19	PWM able
Digital Output #4	M-21	PWM able
Digital Output #5	M-05	PWM able
Digital Output #6	M-07	PWM able
Digital Output #7	M-22	PWM able, Coil #5 (with ext igniter)
Digital Output #8	M-24	PWM able, Coil #6 (with ext igniter)
Digital Output #9	M-25	Coil #7 (with ext igniter)
Digital Output #10	M-06	Coil #8 (with ext igniter)
Injector #1	M-03	
Injector #2	M-10	
Coil #1	M-01	
Coil #2	M-04	
Battery V+	M-34	
Battery GND	M-09	
Battery GND	M-18	
Battery GND	M-20	

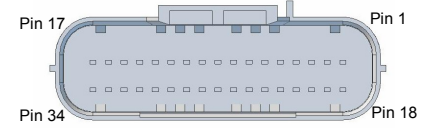

Looking Into the Connector on the ECU



Use the area to the left of the pin descriptions to fill in application specific functions or notes

**WIRING DIAGRAM**

The **PE3** 34-Pin Main Connector

DRAWN BY

BL


DRAWING FILE

PE3 34P CN R4 10-29-11-Notes

Function/Notes

	Ethernet	Pin 01	Ethernet Connector
	Ethernet	Pin 02	
	Ethernet	Pin 14	
	Ethernet	Pin 15	
		Pin 3 Pin 6 Pin 1 Pin 2	
	CAN Bus Lo	C-07	
	CAN Bus Hi	C-08	
	Analog Input #1	C-05	0-5v Input
	Analog Input #2	C-06	0-5v Input
	Analog Input #3	C-18	0-5v Input
	Analog Input #4	C-19	0-5v Input
	Digital Input #3	C-16	Frequency or active when pulled high
	Digital Input #4	C-03	Frequency or active when pulled high
	Digital Input #5	C-04	Active when pulled high
	Digital Input #7	C-17	Active when pulled to GND
	Stepper Motor	C-09	
	Stepper Motor	C-20	
	Stepper Motor	C-21	
	Stepper Motor	C-22	
	Injector #3	C-12	
	Injector #4	C-25	
	Injector #5	C-11	
	Injector #6	C-24	
	Injector #7	C-10	
	Injector #8	C-23	
	Coil #3	C-13	
	Coil #4	C-26	

Looking Into the Connector on the ECU

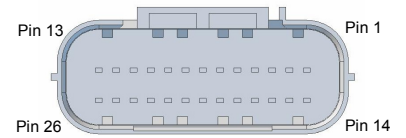

Use the area to the left of the pin descriptions to fill in application specific functions or notes