



This application sheet covers assembly instructions for Weatherpack style connectors like those used on GM MAP sensors and many other applications.

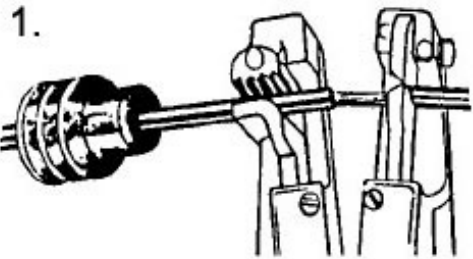

Install the seal on the cable before stripping the wire



Line the end of the seal with the end of the wire insulation

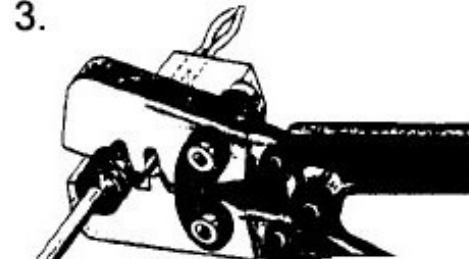

Put terminal and seal in crimping tool and fully crimp



Inspect assembly before pushing into connector housing